




95 State Street, Westbury, NY, USA 11590

Tel: 516-333-2600 Fax: 516-333-2618 URL= <http://www.Metpar.com> E-mail: Sales@Metpar.com

How to disengage a door from the locked position in an emergency situation.

The following suggestions pertain to our Powder Shield (Baked Enamel) and Stainless Steel toilet partitions when equipped with the concealed indicator latch. The following guidelines are meant to provide an alternative way to open a stall door in an emergency situation when the stall is occupied and the door is closed and locked.

1. Lift up the door from the bottom approximately one inch. This will disengage the chamfered latch from the pilaster. This action causes the latch to retract into the door and then the door will open automatically.

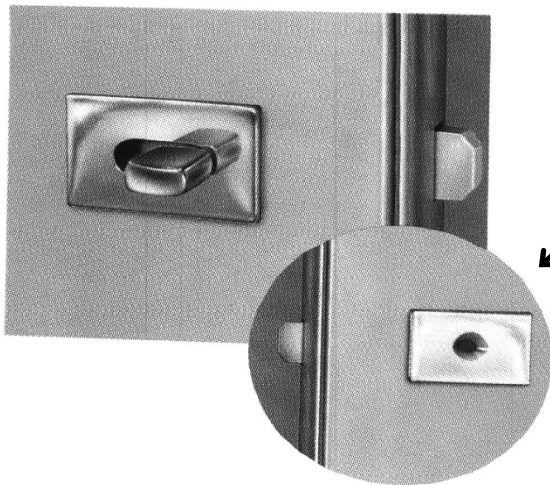

Note how the slide latch is chamfered to allow the door to open when lifted.

The indicator shows red when the door is closed and green when it is open.

- OR -

2. Using a sharp object, (ie: paper clip, pen, small screwdriver) break a whole through the red indicator paper and insert it into the hole. Move the slide latch to the side (away from the pilaster). The latch will retract into the door which will then allow the door to open.

If you have any questions regarding this unique Metpar design, or if we can be of assistance in any other way, feel free to contact our Service Department 8:30am to 5pm EST, Monday through Friday.